

ALPHA

PRE9060 Installation Guide

May, 2005

X001ZF28

ALPHA HeatSink

Installation Guide


Model **PRE9060M92P**
PRE9060M93

For Pentium4 Prescott LGA775

Please verify that all parts are contained in the package per the following matrix.

PARTS	Q'TY	MODEL		
		PRE9060M92P	PRE9060M93	PRE9060T
Heatsink	1	○	○	○
Intake-Cover CT9028	1	○	○	○
Screw M3 x 85 (to attach FAN)	4	○	○	○
Washer	4	○	○	○
FLG775	2	○	○	○
Screw M3 x 6 (to attach FLG775)	4	○	○	○
Nylon Washer	4	○	○	○
Prescot CLIP	2	○	○	○
FAN	1	○ M92P	○ M93	
THERMAL GREASE YG6260-5	1	○	○	

- 1 Assemble Heatsink/Intake-cover/Fan using M3 screw with washer (steel).
- 2 Install FLG775 on the MB using M3-SCREW with Nylon-Washer.
- 3 As shown in figure, attach Prescott CLIP to FLG775.
- 4 INSTALL THE HEAT SINK
Apply a thin layer of thermal grease to the top of the processor and gently place the heat sink on top of the processor.
- 5 Pull up the clip-knob and hook both ends of the clip to the tabs on the Intake-Cover. Hook in an alternating, crisscross pattern While pushing down so the heat sink will not shift. For example, 5A -> 5B -> 5C -> 5D.
- 6 FINAL ASSEMBLY AND INSPECTION
If not already done, reinstall the MB inside the case.
The PRE9060 should now be fully assembled.
Inspect the heat sink to ensure that it is sitting level relative to the processor and socket. Make sure that the heat sink is not interfering with any part of the MB or case.

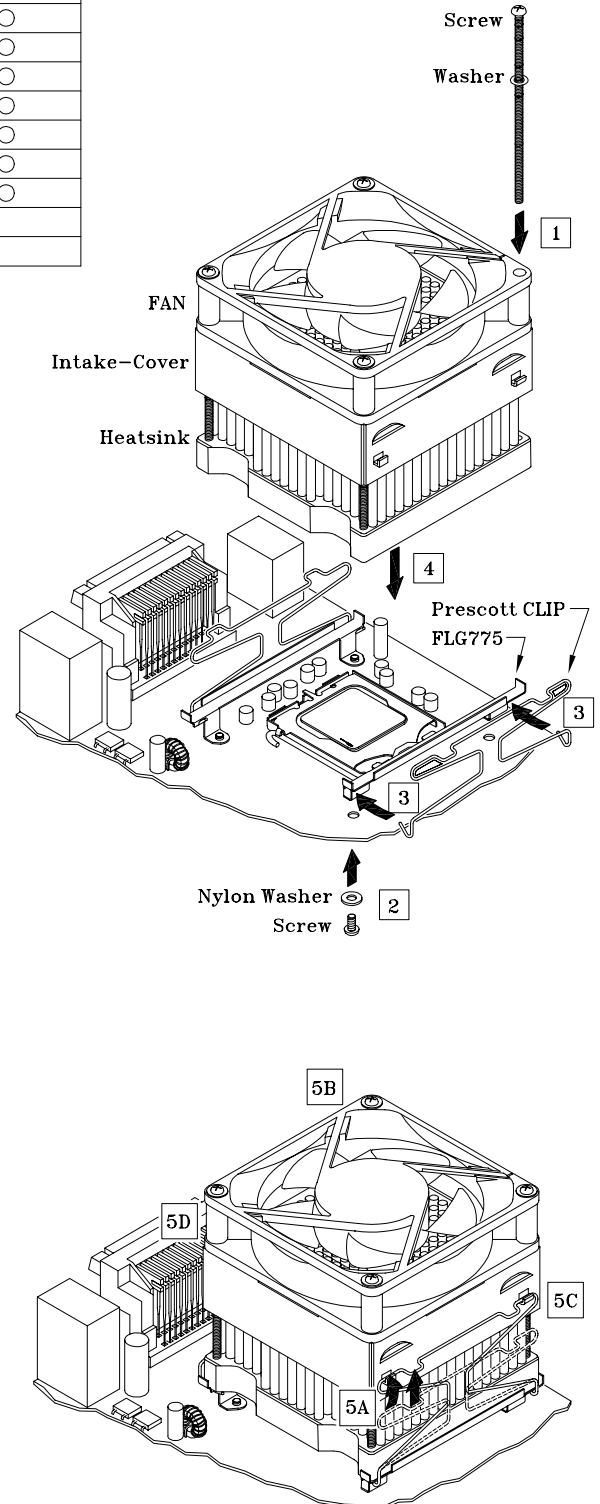

information subject to change without notice.